

CONTENTS

INTRODUCTION	1
Document Conventions	4
Key Panel	5
Display	7
Power Supply	9
SETUP MAIN MENU	11
Display's Language	12
Real Time Clock	12
Daily Alarm	14
Display's Format	15
Memory Check	15
Data Deletion	16
Set Contrast	16
Speech Frequency	17
Speech Speed	17
Secret On/Off	18
Key Tone On/Off	21
Set Sleep Time	21
DICTIONARY	22
General Dictionary Function	22
Advanced Word Recognition	25
Instant Reverse Translation	25
Spell-Checker Vector Ultima™	26
Pronunciation of Words and Sentences	27
USER DICTIONARY	29
GRAMMAR	31
TOEFL	32
Tutorial	32
Sample Tests and Sample Exercises	33
DIALOGS	35
IRREGULAR VERBS	36
IDIOMS	37

TELEPHONE DIRECTORY	38
SCHEDULE	40
CALCULATOR	42
METRIC CONVERSION.....	43
CURRENCY EXCHANGE	44
WORD GAME	46
WORLD TIME	48
LOCAL TIME	49
PC COMMUNICATION	49
ADDITIONAL FEATURES.....	51

INTRODUCTION

Congratulations on purchasing the English<->Serbo-Croatian Digital Language Learning System *Language Teacher® ESC600T*. The *Language Teacher® ESC600T* is a result of combined efforts of Ectaco's staff of linguists, engineers, and programmers, representing the fifth generation of the highest performance electronic educational tools. You are now owner of the most advanced electronic device that has ever been produced for foreign language studies.

The digital Language Learning System *Language Teacher® ESC600T* features:

- ◆ *Main vocabulary of over 400,000 words, including medical, technical, legal, and business terms, as well as slang and general expressions*
- ◆ *English Grammar electronic book with topic search function*
- ◆ *TOEFL test*
- ◆ *Instant reverse translation*
- ◆ *128K trilingual organizer*
- ◆ *High-speed data communication with PC*
- ◆ *Screen and key panel backlight for operation under limited light conditions*
- ◆ *New words recording function for dictionary expansion*
- ◆ *Vector Ultima™ spell-checking system*
- ◆ *200 popular American idioms*
- ◆ *Advanced word recognition system*
- ◆ *English irregular verbs*
- ◆ *Over 1000 commonly used and emergency phrases*

- ◆ *Word game*
- ◆ *Currency conversion*
- ◆ *Metric conversion*
- ◆ *World time*
- ◆ *Clock*
- ◆ *Alarm*
- ◆ *Calculator*
- ◆ *External power jack for non-battery operation*

The latest speech technology employed by the *Language Teacher® ESC600T* allows you to listen to the pronunciation of English words and sentences, which makes it an ideal language tutor for you.

Enjoy your *Language Teacher® ESC600T* and make it your personal travel and business companion.

For best results and to ensure that you are able to employ all of the sophisticated features of your *Language Teacher® ESC600T* to their fullest, read this user's manual carefully and keep it on hand for future reference.



Note: As continuous efforts are made by the manufacturer to improve quality and performance of the *Language Teacher®* products, some characteristics or the design features of the actual device you purchased may slightly differ from their description in this manual.

Document Conventions




Whenever the keys' captions are referenced in text, it will be shown using UPPERCASE, e.g. ENTER.

Whenever a section's name or information displayed on screen is referenced in text, it will be shown using *italics*, e.g. *Currency Exchange*.

Boldface is used for emphasis.

Symbols ◀ ▶ ▲ ▼ refer to four cursor control keys located at far right on the key panel.

Following icons mark paragraphs dealing with:

- step by step directions within a section
-  control keys
-  talking function
-  important notes.

Key Panel


The character section of the key panel emulates the American QWERTY keyboard layout, upgraded with additional Serbo-Croatian characters marked on the keys.

The English and Serbo-Croatian character sets, as well as a numeric layout, are each linked to their input modes, indicated in the screen's upper right-hand corner (whenever editing is available) by symbols **E**, **S** or **N**, respectively.



Input modes can be switched consecutively in the above sequence by pressing the ↔ key. In the main dictionary, however, the input mode selection is handled automatically to comply with the current source language, and the ↔ key is used for changing the translation direction.

To enter specific Serbo-Croatian letters Ć, Č, Đ, Š, Ž press and release SHIFT prior to using a corresponding letter key.

An additional symbols set is available through SHIFT+▲. Press ► to see more symbols. Press the indicated number key to insert a selected symbol.

Both the key panel and the display can be backlit by pressing the  key.

Description of Control Keys

ON/OFF	On/Off switch
DICTIONARY	Main dictionary
GRAM	English grammar and TOEFL sections
DIAL	Dialogs
TEL	Telephone directory
TIME	Local time
	Screen and key panel backlight
↔	Change of input mode or translation direction
MENU	Icons menu
	Talking
PREV / NEXT	Paging
◀ ▶	Cursor movement or highlighting
▼ ▲	Cursor movement or line scrolling
ENTER	Execute
ESC	Cancel / Go to previous level
SHIFT+▲(SYMB)	Display set of additional symbols
SHIFT+◀(DEL)	Delete character / Delete record
SHIFT+▶(MARK)	Mark record as password protected



SHIFT+▼(EDIT)	Enable record editing / Change Insert/Overwrite
SHIFT+ENTER (SPELLER)	Launch the spelling checker in the main dictionary
SPC	Enter a space
SHIFT+SPC	Enter a hyphen

Computational symbols and operations are available with the *Calculator*.

Display

The *Language Teacher® ESC600T* is equipped with a four-line high-resolution display. Both the display and key panel can be backlit by pressing the  key.

The right-hand border of the display is reserved for system symbols, which light up to signal an activated or available function:

EDIT	Current record opened for editing
SHIFT	SHIFT key engaged
MARK	Current record marked as protected
INS	Insert is active editing mode
BATT	Batteries discharged: replace promptly
	Password protection on (Unit locked)
	Alarm on
◀ ▶	Highlight bar can be moved horizontally
▼ ▲	Vertical scrolling or paging enabled / more text available.

Highlight bar is an **inverse video** display of an icon or a portion of text. To **select** a screen item highlight it and press ENTER.

Cursor appears either as a blinking underscore _ (*Insert*) or a blinking solid rectangle ■ (*Overwrite*). It marks the position where (or to the left of which in the *Insert* mode) a character will be entered or deleted.

Icons Menu

The *Language Teacher® ESC600T* features a graphical start-up interface with four sets of functional icons, which visually organize and facilitate access to the dictionary's multiple sections.



To display the Icons Menu, press MENU, or close a current section using the ESC key.

To alternate between four icon sets, use NEXT and PREV.

Move highlight bar within the current set with the ◀▶ keys.

To open a section whose icon is highlighted, press ENTER.

The icons of the *Icons Menu* represent following sections of the *Language Teacher® ESC600T*:



Main Dictionary



User's Dictionary



English Grammar and TOEFL



Dialogs



Irregular Verbs



American Idioms



Telephone Directory



Schedule



Calculator



Metric Conversion



Currency Exchange



Word Game



World Time



Local Time



PC Communication



Setup Main Menu

Power Supply

The *Language Teacher® ESC600T* is powered by three (3) AAA batteries. When the batteries become weak, the warning symbol BATT will light up in the lower-right corner of the display. To prevent the unit's malfunction and possible loss of user's data in the event of a complete battery discharge, promptly replace the whole set of batteries as soon as the warning symbol appears. Do not mix old and new batteries.



Note: After purchasing the *Language Teacher® ESC600T* you might have to remove an insulation stripe from the battery compartment. It is used to prevent the discharge of batteries during storage and transportation.

- Press the ON/OFF key to turn the unit off.
- Remove the battery compartment cover by pushing its latch down and away from the unit.
- Take out the middle battery first, then slide toward center and remove two remaining batteries.
- Insert three new batteries, placing the last one in the middle.



Note: Make sure to place the batteries according to the polarity markings (+ -) inside the compartment.

- Align the cover at the bottom of the battery compartment and slightly press on the latch to engage the lock.

You have 2 minutes to replace the batteries without risk of a system reset, which may cause loss of user's data stored in RAM.

Do not exceed the 2 min. limit! Neither manufacturer nor dealer may be held responsible for the loss of user's data.



Note: Never try to remove batteries from the translator when the power is on. This can seriously damage the device. Accidentally doing so, as well as certain other circumstances (e.g. forgotten password), may compel you to reset the dictionary manually. Use a pointed device to press the reset button located on the front panel next to the A key.

During a system reset, press the N key at the prompt *System Initialization. Press (Y/N) key* to attempt preserving user's data and a customized system configuration. However, if RAM has been corrupted, or if you turn the dictionary on for the first time, you will have to press Y to reinitialize the system.



Note: The Language Teacher® ESC600T is equipped with a jack for external power supply. To order a


compatible AC/DC adapter, contact your dealer or an Ectaco service center listed at the end of this book.

 
Use of an inappropriate external power supply may cause failure of the unit and void the warranty.

SETUP MAIN MENU

To be able to adjust the *Language Teacher*® *ESC600T*'s configuration to better suit your needs, read this section first to familiarize yourself with options of the *Setup* main menu.

To access the *Setup* main menu:

- Press ON/OFF to turn the translator on.
- If needed, press MENU to display the *Icons Menu*.
- Locate and highlight icon .
- Press ENTER.

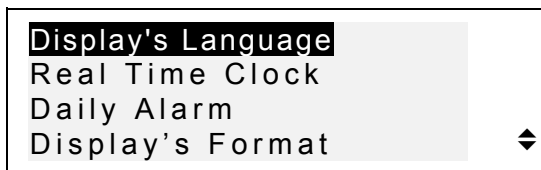

- To select an option, highlight it with ▼ or ▲ and press ENTER.



Note: All prompts and messages appear in English by default. To change the display language to Serbo-Croatian, start the customization from the option *Display's Language*.

Display's Language

Use this option to select the language in which all menus, screen titles, and messages will appear. English is chosen by default.

 
- Select the option *Display's Language* on the *Setup* main menu.



- To change a setting, highlight the desired option and press ENTER. The current setting appears checked.
- Press ESC to return to the Setup main menu.

Real Time Clock

- On the *Setup* main menu, make sure *Real Time Clock* is highlighted and press ENTER to open the *Set Time* screen.

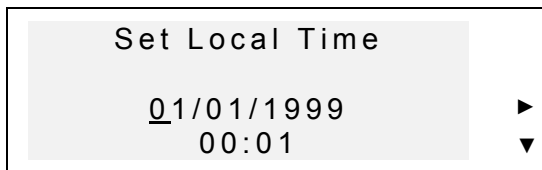

- Specify the current date and time.



Move the cursor with the arrow keys. Change value in a selected field by pressing a number key on the key panel. In the 12-hour format specify A for AM, P for PM.

- Press ENTER to display the *Set Local Time* screen.

Set Local Time
Enter first letter
for country or city.
City: Country: ▶

- Select the field CITY or COUNTRY using the ◀▶ keys, and type a letter. Names of a city and country first on the alphabetical list in the selected category, as well as the city's GMT offset, will appear on the screen.



Note: If you press ENTER without specifying a letter, the currently selected city (*New York, USA* is the default) will be shown.

- For example, type M in the field *City*.

MADRID
SPAIN

+01:00 ▼



Use the ▼▲ keys to list all cities in alphabetical order, or use NEXT / PREV to move by countries (and cities within each country). At any time you can press a letter key as a shortcut to the alphabetically first city listed under this letter.

- Press ENTER to advance to the next screen.

Speaking clock:
On

▼



 
Note: You may use your *Language Teacher®* as a talking clock (default setting). When you open the *Local*

Time screen, you will hear the current time announcement.

- To disable or re-enable the announcement of time, use the ▼ key.
- Press ENTER to save the changes and return to the *Setup* main menu.

Daily Alarm

- Select the option *Daily Alarm* on the *Setup* main menu.

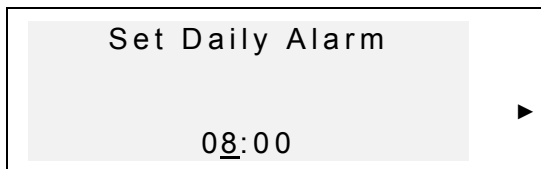

- Specify the *Daily Alarm* time.




Move the cursor with the ◀▶ keys. Change value in a selected field by pressing a number key on the key panel. In the 12-hour format specify A for AM, P for PM

- Press ENTER to advance to the next screen.



- To turn the *Daily Alarm* on (default setting) or off, use any arrow key.

- Press ENTER to save the changes and return to the *Setup* main menu. If the *Daily Alarm* is on, a bell sign  will light up on the right side of the display.

Display's Format

 
- Select the option *Display's Format* on the *Setup* main menu.



- To change a setting, highlight the desired option and press ENTER. Current settings appear checked (24-hour DD/MM/YY format is the default).
- Press ESC to return to the *Setup* main menu.

Memory Check

- Select the option *Memory Check* on the *Setup* main menu to view the current status of available user's memory.

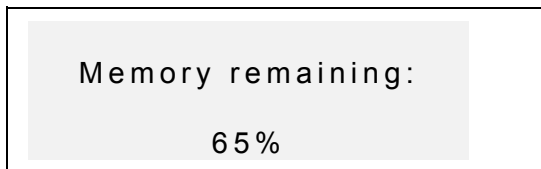


- Press ENTER to return to the *Setup* main menu.

Data Deletion

 
- Select the option *Data Deletion* on the *Setup* main menu.



- To delete all records in an organizer section, select the *Telephone*, *Schedule*, or a *User Dictionary* option and confirm a displayed prompt.
 - To delete all records marked as protected, select the *Marked Records* option and confirm a displayed prompt.
-  **Note:** The *Marked Records* option allows you to release memory kept by inaccessible records if you forget your password.
- Press ESC to return to the *Setup* main menu.

Set Contrast

- Select the option *Set Contrast* on the *Setup* main menu.

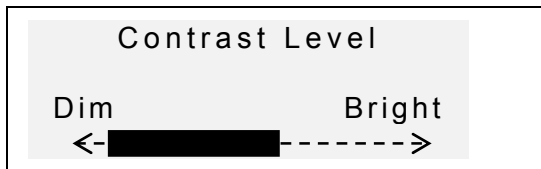

- Use the ◀▶ keys to adjust the contrast level.

- Press ENTER to save the changes and return to the *Setup* main menu.

Speech Frequency

 
- Select the option *Speech Frequency* on the *Setup* main menu.



- Use the ◀▶ keys to adjust the speech frequency.
- ① Press 🗣️ to check the changed pronunciation.
- Press ENTER to save the changes and return to the *Setup* main menu.

Speech Speed

- Select the option *Speech Speed* on the *Setup* main menu.

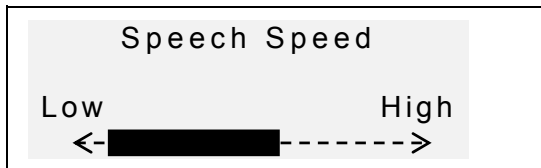

- Use the ◀▶ keys to adjust the speech speed.
- ① Press 🗣️ to check the changed pronunciation.

- Press ENTER to save the changes and return to the *Setup* main menu.

Security

With this option you can set, change, and clear a password used to secure your records in the *Telephone Directory* and *Schedule* sections, as well as enable and disable the password protection.



Note: Always remember your password. If you forget the password, records marked as protected will become unavailable. You will have either to reset the dictionary (see *Power Supply*), which may lead to loss of all stored user's data, or to remove the password from the system, releasing memory taken up by marked records (option *Marked records* on the *Data Deletion* menu described above).

 
Setting Password

- Select the option *Security* on the *Setup* main menu.
- If no password is set, a prompt to enter a password is displayed:

Enter password:

]

- Specify your password. The length of the password cannot exceed 7 characters, English letters only.
- Press ENTER. A confirmation message is displayed.

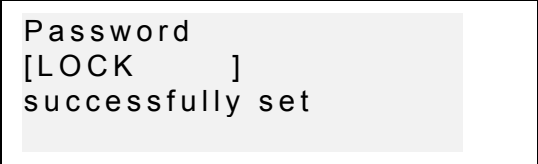


Password
[LOCK]
successfully set


- Press ENTER to return to the *Setup* main menu.

Lock the Unit

 - Select the option *Security* on the *Setup* main menu.
- If a password is set but not activated, the following menu is displayed:

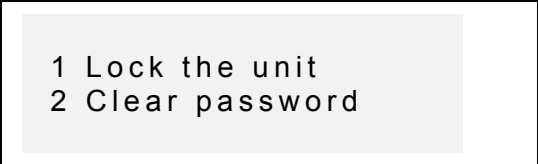

1 Lock the unit
2 Clear password

- To enable the password protection of marked records and return to the *Setup* main menu, press the 1 key. A confirmation message will be shown, and a key symbol  will light up at right indicating that the password protection is on.

 


Note: For information about how to mark records to protect your private data refer to the sections *Telephone Directory* and *Schedule*.

Unlock the Unit

- Select the option *Security* on the *Setup* main menu.

- If the password protection is currently enabled, you will be prompted to enter the password in order to turn the protection off:

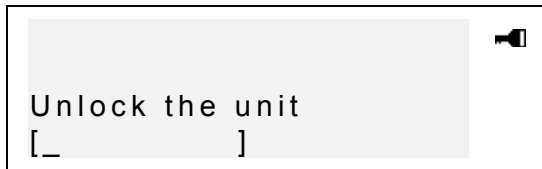


- Press ENTER to disable the password protection and return to the *Setup* main menu. A confirmation message will be shown, and the key symbol will disappear.




Note: If you make a mistake typing your password, the message *Wrong Password* will appear. The password protection will not be disabled.

Clearing Password

 - If password protection is on, disable it as described above.
- Select the option *Security* on the *Setup* main menu.

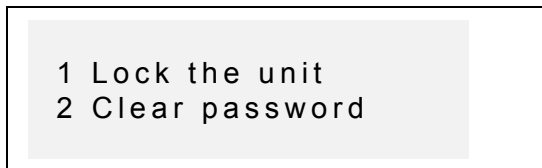

 - To delete the password, press the 2 key and specify your password at the prompt:

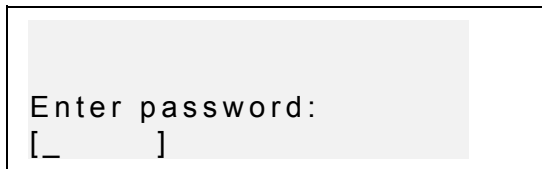

- Press ENTER to delete the password and return to the *Setup* main menu. A confirmation message will be shown.



Note: If you make a mistake typing your password, the message *Wrong Password* will appear. The password will not be cleared.

Key Tone On/Off

When the *Key Tone* is on (default), you hear a short beep every time you press a key on the key panel.

- Select the option *Key Tone* on the *Setup* main menu.

 


- To change a setting, highlight the desired option and press ENTER. The current setting appears checked.
- Press ESC to return to the *Setup* main menu.

Set Sleep Time

This option allows you to change the period of time until an automatic turn-off if no key has been pressed.

- Select the option *Sleep Time* on the *Setup* main menu.

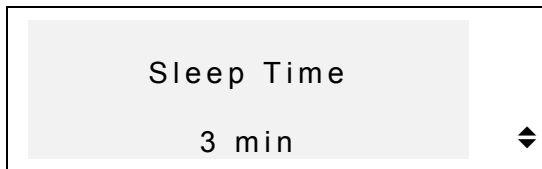


- Use the ▼ ▲ keys to adjust the sleep time in the range from 3 (default) to 12 minutes in 3-minute increments.
- Press ENTER to save the changes and return to the Setup main menu.

DICTIONARY

The Digital Language Learning System *Language Teacher® ESC600T* contains the most advanced English↔Serbo-Croatian electronic dictionary on the market. In order to fully utilize the translator's potential, carefully read this section of the user's manual.

General Dictionary Function

- Press the ON/OFF key to turn the dictionary on.
- Press the DICT key or choose  on the *Icons Menu* to enter the main *Dictionary* section. The title of the dictionary you used last time appears on the input screen.



Note: The *English->Serbo-Croatian* dictionary defaults after a system initialization.



- Select a language pair and the direction of translation.



Note: The direction of translation is indicated by an arrow in the dictionary title.



To select a language pair, press the DICT key repeatedly to alternate between the *English->Serbo-Croatian* or *Serbo-Croatian->English* dictionaries. To reverse the translation direction in a chosen language pair, press the ↔ key.

On the *Dictionary* input screen under the current dictionary's title, you see a cursor where the first letter you enter will appear.

- Using the key panel, type in a word you want to have translated.

 


Use SHIFT+◀ to delete the last letter.

Use SHIFT+▼ to switch between *Overwrite* and *Insert* editing modes.

Press SPC for space, SHIFT+SPC for hyphen.

- For example, enter *catch* in the *English->Serbo-Croatian* dictionary.

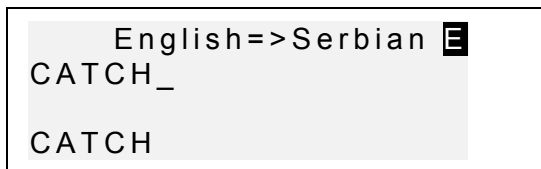

- Press ENTER to retrieve the entry. You will see translations of the word *catch*.

CATCH
CAKA [ŽARG.] [N],
KVAKA [N], ULOV [N],
ZAMKA [N], HVATANJE



Symbol ▼ at right signals that more translations are available.

- Use ▼ to scroll down and see more translations. To scroll back up, press ▲.



To go to the next or previous entry, use NEXT or PREV.



Note: Translations are listed in the alphabetical order of their respective grammatical labels, which appear in square brackets and have the following meaning:

A	adjective
ABBR	abbreviation
ADV	adverb
CONJ	conjunction
ID	idiom
INTRJ	interjection
N	noun
PHR	phrase
PREF	prefix
PREP	preposition
V	verb



 
To return to the input screen, use ESC.

To translate another word in the same dictionary while an entry is displayed, just start typing, and the input screen will appear automatically.

Advanced Word Recognition

Your *Language Teacher® ESC600T* is equipped with an *Advanced Word Recognition* feature. While you are keying in the word you want to have translated, a word closest in spelling to the portion entered so far appears on the screen's bottom line. If you saw the desired word before you finished typing, press ENTER to display its translations.

- Start typing, for example, the word *daughter* in the *English->Serbo-Croatian* dictionary. When you reach the letter G, the whole word will appear below.

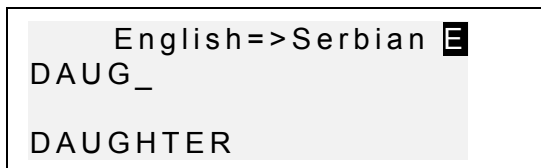

- Press ENTER to retrieve the entry.



Note: Proper usage of this function lets you effectively accelerate your work while translating large texts.

Instant Reverse Translation

For your convenience, the *Language Teacher® ESC600T* is designed to provide an *Instant Reverse Translation* for all words in the main *Dictionary*.

- Display translations for a word, e.g. *catch* in the *English->Serbo-Croatian* dictionary.

CATCH
 CAKA [ŽARG.] [N],
 KVAKA [N], ULOV [N],
 ZAMKA [N], HVATANJE



- Press the ▶ key to highlight the translations consecutively.

CATCH
 CAKA [ŽARG.] [N],
 KVAKA [N], **ULOV** [N],
 ZAMKA [N], HVATANJE



Note: The display will scroll automatically to reveal any hidden translations when you move the highlight bar.

- Press ENTER to make an instant reverse translation of the highlighted word.

ULOV
 CATCH [N], TAKE [N]



- To return to the original entry, press ESC.

 
Spell-Checker Vector Ultima™

The spelling checker *Vector Ultima™* is one of the most advanced proofing tools on the market. It can be very useful when you are unsure of a word's exact spelling.


- Type, for example, *mountain* as you hear it in the *English->Serbo-Croatian* dictionary.



- To run a spell-check, press SHIFT+ENTER. A list of suggestions will be displayed.

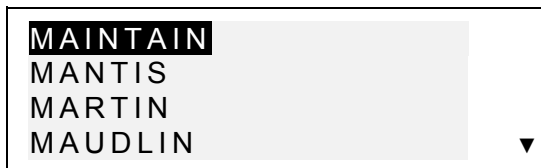

 - Use the ▼ key to scroll down and highlight *MOUNTAIN* and press ENTER to retrieve the entry.

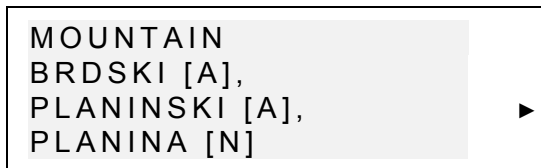

Note: If the *Spell-checker* is unable to make a suggestion, the message *No suggestion! Press [NEXT] to find the nearest word* is displayed. Press NEXT for the closest match or ESC to return to the input screen.

Pronunciation of Words and Sentences

One of the most exciting features of the *Language Teacher® ESC600T* is the T-T-S (text-to-speech) based unlimited pronunciation technology for all English words and phrases.

- Display translations for an English word, e.g. *catch*.

CATCH
 ČAKA [ŽARG.] [N],
 KVAKA [N], **ULOV** [N],
 ZAMKA [N], HVATANJE



- ① Press to listen to the pronunciation of the English headword.

- Display translations for a Serbo-Croatian word, e.g. *ulov*.

ULOV
 CATCH [N], TAKE [N]



- ① Press to listen to the pronunciation of all English translations.
 Highlight a translation with the ► key and press to hear this translation only.



Note: T-T-S is able to generate pronunciation of any English text, not limited to dictionary entries. Simply type a word or phrase on the input screen of the *English->Serbo-Croatian* dictionary and press to have the text pronounced.

On the *Setup* main menu you may adjust the frequency and speed of speech shaping your own pronunciation style.




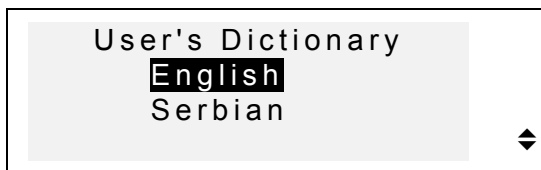 
Note: The *Language Teacher® ESC600T* is equipped with a volume control, located on the left-hand edge of the unit's case.

USER DICTIONARY

 
The *Language Teacher® ESC600T* allows you to create your own vocabulary, which automatically links to the translator's main *Dictionary*.

Creating a Record

- Select  on the *Icons Menu*. The *User's Dictionary* selection menu is shown.



- Select an option, for example, *Serbo-Croatian User's Dictionary*, and create a Serbo-Croatian headword you want to add to your vocabulary.

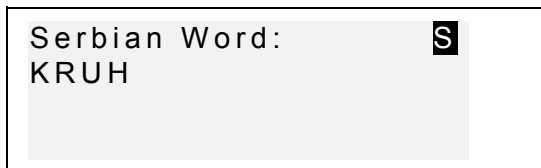

Use arrow keys to move the cursor, SHIFT+◀ to delete a character to the left of (*Insert*) or above the cursor (*Overwrite*).

Press SPC for space, SHIFT+SPC for hyphen.

Use SHIFT+▼ to switch between *Overwrite* and *Insert* editing modes.

- Press ENTER to open the next page *Explanation*.

- If needed, select an input mode with the ↔ key and enter your definition of the headword, for example:


Explanation: BREAD_	E
------------------------	---



- You may want to use additional symbols available by pressing SHIFT+▲ (► for more).
- To save a record, press ENTER. A new record template will be opened.
 - To exit without saving, use ESC repeatedly to clear the screen and return to the *User's Dictionary* menu.


Managing Records



- Select  on the *Icons Menu* and open one of the *User's Dictionaries*. A new record template will appear.
- Use NEXT or PREV to view existing records.


KRUH BREAD
3

- To edit a record, press SHIFT+▼ and follow instructions in *Creating a Record*.
- To delete a record, press SHIFT+◀ and confirm a displayed prompt.



- To listen to a record's contents, press .
- To open an existing *User's Dictionary* record from the main *Dictionary*, enter your record's headword **in full** on the input screen of a corresponding main *Dictionary* and press ENTER.

GRAMMAR

The *Language Teacher® ESC600T* offers an extensive grammatical aid programmed into the electronic device.

- Press the GRAM key or select  on the *Icons Menu* to open the *Grammar* menu.

 
1. Search By Screen Code
 2. Sequential Search

- Press 1 to retrieve a topic by its screen code.
-  To search by screen code from within the text, press S for an input prompt.
- Specify a topic code in the format X.X (use the [./] key to enter a decimal point) and press ENTER.
- Press 2 if you want to use multilevel menus to navigate through topics.
-  Press the corresponding letter key to select a menu option.
Press ESC to return to a previous level.
Use ▼ ▲ to scroll the text within each topic.

TOEFL

Your *Language Teacher® ESC600T* contains a practical preparation guide for the *Test of English as a Foreign Language* (TOEFL), which is required of non-native English speakers as part of the admission procedure to an American college. This section offers you a unique opportunity to practice the computerized test version as it is likely to be presented to you at a real examination.

- Press the TOEFL key to see the TOEFL Menu.

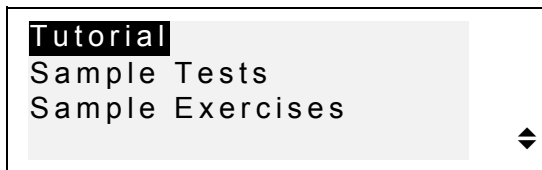

- Highlight your choice and press ENTER.

Tutorial

The *Tutorial* provides you with general information about the requirements, structure, and duration of a TOEFL test. The *Tutorial* text is available in English and Serbo-Croatian languages. These options can be selected from the *Tutorial* submenu.

- Select *Tutorial* on the TOEFL menu.



- Select the language you want to read the *Tutorial* in.

- Read the *Tutorial*, accessing its sections by pressing the indicated letter keys.

After you become acquainted with TOEFL basics set forth in the *Tutorial*, you might feel prepared to practice in answering questions. For your convenience, sample questions are arranged in two sequences, represented by the options *Sample Tests* and *Sample Exercises*.

Sample Tests and Sample Exercises

- Highlight and press the *Sample Tests* line on the *TOEFL* menu to open the *Sample Tests* submenu.



There are four complete tests for you to choose from. Each test contains Multiple Choice questions pertaining to all three sections of the TOEFL test in this order: *Listening Comprehension, Structure and Written Expression, Vocabulary and Reading Comprehension*.

- Select *Sample Exercises* on the *TOEFL* menu to open the *Sample Exercises* submenu.



The *Sample Exercises* option allows you to practice each of three sections of the TOEFL test separately. The same questions from four available sample tests are rearranged depending on which section of the test they refer to. The sections are further subdivided into

two or three parts comprising questions of the same type. For example, parts of *Structure & Grammar* are:

Sentence Completion Error Identification	◆
--	---

Regardless of which practice form you have chosen, each sample question is structured as follows:

- Question text (not displayed in the *Listening Comprehension* section), for example:

1. Among the astronomers of ancient Greece, two theories _ _ _ _ _	◆
---	---

- Four answer versions lettered A, B, C, D; for example

A developing B in development C developed D which they	◆
---	---

Selecting an Answer and Displaying the Score

When you have made up your mind about the right answer, press the corresponding letter key to save the answer and go to the next question. At the last question in a test or in an exercise section, or whenever you decide to finish practicing and press ESC, the following sum-up information is displayed:

Total:	100
Shown:	57
Answered:	22
TOEFL Score:	90


The first line discloses total number of questions in a test or a section of *Sample Exercises*. The second and third lines indicate, respectively, how many questions were displayed and correctly answered during the concluded session. The fourth line shows your score, which is calculated after an authentic formula.

DIALOGS

Over a thousand American common and emergency phrases translated into Serbo-Croatian are stored in the *Language Teacher® ESC600T's* memory. For ease of reference, phrases are organized into conversational dialog topics listed below:



- | | |
|------------------------------|-------------------------------|
| 1. <i>Basic Conversation</i> | 7. <i>Communication</i> |
| 2. <i>Traveling</i> | 8. <i>At the Bank</i> |
| 3. <i>Hotel</i> | 9. <i>Transport</i> |
| 4. <i>In the Restaurant</i> | 10. <i>Health</i> |
| 5. <i>Shopping</i> | 11. <i>Cosmetology</i> |
| 6. <i>Sightseeing</i> | 12. <i>Calling for Police</i> |

Each topic contains a number of episodes.

- Press the DIAL key or select  on the *Icons Menu* to open the *Dialogs* section. The title of the first topic will be displayed.


Basic Conversation.
OPŠTI DEO.



- Choose a topic, then an episode.
-  Use ▼▲ to browse topic or episode titles, ENTER to open a displayed title.
Use NEXT / PREV to move between entries, ▼▲ to scroll individual entries, ESC to return to a previous level.
- ① Press the  key to listen to the pronunciation of an English phrase.

IRREGULAR VERBS




Forms of all commonly used English irregular verbs may be quickly looked up in the *Language Teacher® ESC600T's Irregular Verbs* directory. Verbs in each section are arranged in the alphabetical order.

- Press the VERB key or choose  on the *Icons Menu* to open the *Irregular Verbs* directory.

Irregular Verbs
Nepravilni glagoli


- Press the corresponding letter key to select one of the sections.

First Letter: _


- Specify a letter to display the first verb starting with this letter.
-  Use NEXT / PREV to move between entries, ▼▲ to scroll individual entries, ESC to return to the letter input prompt.
-  Press the  key to listen to the pronunciation of an irregular verb's forms.

IDIOMS

Over 200 popular American idioms and their translations or equivalents in Serbo-Croatian are listed in the alphabetical order in the *Idiom* section.

- Select  on the *Icons Menu* to open the *Idioms* section.

First Letter: _


- Specify a letter to display the first idiom starting with this letter.
-  Use NEXT / PREV to move between entries, ▼▲ to scroll individual entries, ESC to return to the letter input prompt.

- ① Press the  key to listen to the pronunciation of an English idiom.


TELEPHONE DIRECTORY

You may store names, telephone numbers, and addresses within the *Telephone Directory* in English or Serbo-Croatian, view, edit, delete the entries, and listen to the pronunciation of a record's contents.

Creating a Record




- Select  on the *Icons Menu* to to open the first *Telephone directory* record in the viewing mode.
- Press ENTER to open a new record template.

NAME : —

- Fill out the first page *Name*, changing the input mode with the ↔ key if needed.
-  Use arrow keys to move the cursor, SHIFT+◀ to delete a character to the left of (*Insert*) or above the cursor (*Overwrite*).
Press SPC for space, SHIFT+SPC for hyphen.
Use SHIFT+▼ to switch between *Overwrite* and *Insert* editing modes.
You may want to use additional symbols available by pressing SHIFT+▲ (▶ for more).

- Press ENTER and fill out the next page *Number*. Numeric mode is enabled automatically.
- Press ENTER and type in an *Address*, switching the input mode as necessary.
- To mark (or unmark) a record as password protected, press SHIFT+►. A label MARK will light up (or go out, respectively) at right.
- To save a record, press ENTER. A new record template will be opened.
- To close a record without saving, use ESC repeatedly to clear the screen and return to the *Icons Menu*.


Managing Records

- Select  on the *Icons Menu* to open the first *Telephone Directory* record in the viewing mode.
 - Use NEXT or PREV to view other existing records.
-  **Note:** If the password protection is turned on (see *Security*), marked records will not appear on the record list. To see them, first disable the password protection as described in section *Setup Main Menu*.
- To edit a record, press SHIFT+▼ and follow instructions in *Creating a Record*.
 - To delete a record, press SHIFT+◄ and confirm a displayed prompt.
 - To listen to a record's contents, press .

SCHEDULE

You can effectively plan out your time using the *Schedule* section of your *Language Teacher® ESC600T*. You may enter records in English or Serbo-Croatian, edit, search, delete records, and listen to the pronunciation of a record's contents.

Creating a Record

- Select  on the *Icons Menu* to open the first *Schedule* record in the viewing mode.
- Press ENTER to open a new record template. The current date appears on the screen.

Date: M/D/Y = 01/01/1999



Note: The date and time display format can be adjusted on the *Setup* main menu.

- Type, if needed, another date with number keys, using ◀ ▶ to move the cursor, and press ENTER to go to the *Time* page.
- Specify a start and end time for a scheduled event with number keys, using ◀ ▶ to move the cursor. In the 12-hour format type A for AM, P for PM.

Time:

11:30AM-1:00PM

- Press ENTER and type in *Schedule* contents, changing the input mode with the ↔ key if needed.



Use arrow keys to move the cursor, SHIFT+◀ to delete a character to the left of (*Insert*) or above the cursor (*Overwrite*).


Press SPC for space, SHIFT+SPC for hyphen.

Use SHIFT+▼ to switch between *Overwrite* and *Insert* editing modes.

You may want to use additional symbols available by pressing SHIFT+▲ (► for more).

- To mark (or unmark) a record as password protected, press SHIFT+►. A label MARK will light up (or go out, respectively) at right.
- To save a record, press ENTER.
- To close a record without saving, use ESC repeatedly to clear the screen and return to the *Icons Menu*.

 
Managing Records

- Select  on the *Icons Menu* to open the first *Schedule* record in the viewing mode.
- Use NEXT or PREV to view other existing records.



Note: If the password protection is turned on (see *Security*), marked records will not appear on the record


list. To see them, first disable the password protection as described in section *Setup Main Menu*.

- To edit a record, press SHIFT+ ▼ and follow instructions in *Creating a Record*.
- To delete a record, press SHIFT+ ◀ and confirm a displayed prompt.
- To listen to a record's contents, press .

CALCULATOR

Calculator is one of the *Language Teacher®* ESC600T's features designed for your convenience.

 - Select  on the *Icons Menu* to open the *Calculator*.

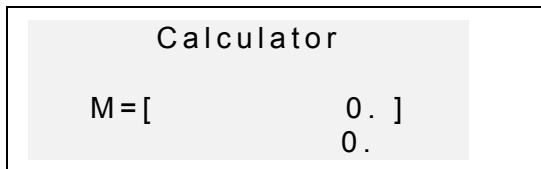

The numeric layout, including symbols of arithmetic and memory operations, is enabled automatically. The memory register is displayed on the screen for easy reference.

- Use this function in the way you would an ordinary calculator.

METRIC CONVERSION

With your *Language Teacher® ESC600T* you may easily convert measurements from the American system into the metric system commonly used in Europe and vice versa.

The following measurements and measurement units are available for instant conversion:

Length: *centimeter, meter, kilometer, inch, foot, yard, mile*


Area: *sq. centimeter, sq. meter, sq. inch, sq. foot, sq. yard*

Capacity: *liter, pint, gallon*

Weight: *gram, kilogram, ton, ounce, pound*

 
Temperature: *°Celsius (centigrade), °Fahrenheit, Kelvin*

Power: *kilowatt, horsepower*

- Select  on the *Icons Menu* to open the *Metric Conversion* menu.




- Press a corresponding number key, or highlight an option with ▼ ▲ and press ENTER.

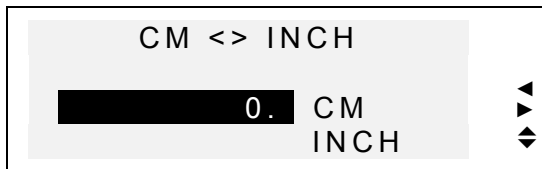

Use ◀▶ to select a unit's pair, ▼▲ to reverse the conversion direction.

 - Type a numeric value in the highlighted field and press ENTER. The result will appear on the bottom line.

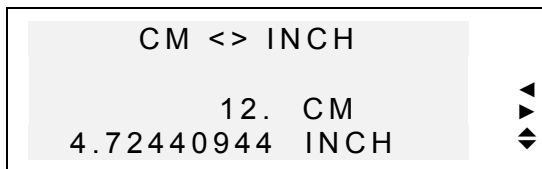

- To make a new calculation, press ENTER.
- To exit to the *Metric Conversion* menu, press ESC.

CURRENCY EXCHANGE

The *Currency Exchange* function built into your *Language Teacher® ESC600T* allows you to instantly convert amounts in 11 pre-installed and 1 user defined currency.

With *Language Teacher® ESC600T*, rates for the currencies of the following nations may be set up, and amounts calculated: USA (USD), Yugoslavia (YUN), Croatia (HKR), France (FFR), Germany (DEM), Great Britain (GBP), Japan (JPY), Sweden (SKR), Finland (FMK), Italy (ITL), as well as the currency of the European Union (EURO). Also, an editable option marked with '?' is provided for any other currency.

- Select  on the *Icons Menu* to open the *Currency Exchange* menu.

Currency Exchange	
1. Display rates	◆
2. Set rate	
3. Calculation	

- To set up exchange rates, press the 2 key, or highlight the second option and press ENTER.



To specify a rate, highlight its field using the ▼▲ keys and type a value with number keys (press L for a decimal point).

USD	1.000	◆
YUN	10.92	
HKR	7.3	
FFR	6.27	



Note: One currency, usually US dollar, must be selected as a base currency with rate 1.00. Rates for other currencies are set relative to the selected base.

- To set up a user currency, scroll down to one of the two bottom lines, press ◀ to highlight the '?' in the label field and type in a currency abbreviation.

FMK	5.68	▶
ITL	1851	
EURO	0.96	
CHF	1.000	

- Press ▶ to highlight the rate field and enter an exchange rate for the new currency.
- To return to the *Currency Exchange* menu, press ESC.

- Use the option *A. Display* to quickly look up the current exchange rate settings.
- To make a calculation, press the 3 key, or highlight the third option and press ENTER.
- Align the highlight bar with a currency label and type in an amount for conversion.



- Press ENTER to make a calculation.
- Scroll with the ▼ ▲ keys to see amounts in other currencies.

WORD GAME

The *Language Teacher® ESC600T* features a learning word game, which improves your spelling ability and enhances your personal vocabulary.

- Select  on the *Icons Menu* to open the *Word Game* menu.

Game Direction
1. English=>Serbian
2. Serbian=>English

- By pressing the corresponding number key select a dictionary you want to guess words from.

English=>Serbian

 
0

- Enter letters trying to guess a hidden word. Correctly guessed letters appear in place of underscores in their actual positions in the word. The counter on the right shows the number of missed tries (total of 8 allowed).

English=>Serbian

E__M__E

5


- You can use help: To have a hidden word pronounced, press . To uncover one letter, press ENTER. Either of these actions counts as an attempt.

When a game ends, the message *You win!* or *You failed!*, depending on the outcome, appears on the screen for a second, and the word translation is displayed. Press ENTER to start a new game.

WORLD TIME

You may view the time around the world using your *Language Teacher® ESC600T's World Time* section. Over 200 cities along with their time zone differences are pre-stored.

 - Select  on the *Icons Menu* to access the *World Time* section.

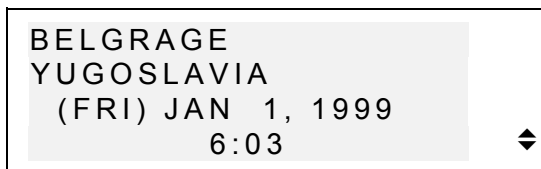


Note: *Belgrade, Yugoslavia* defaults after a system initialization. The displayed date and time format can be adjusted on the *Setup* main menu.



Use the ▼▲ keys to move through the alphabetical list of all cities, NEXT or PREV to move by countries (and cities within each country).

You can use a letter key as a shortcut to the alphabetically first city listed under this letter.

 
- If you wish to see the time, for example, in *Seattle*, first press the S key (*S. Francisco, USA* is displayed), then NEXT once (or ▼ six times):

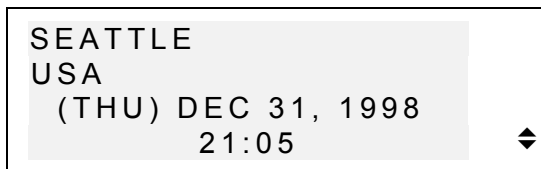


Note: Keep in mind the possibility of the DST adjustment. You may need to add one hour to or subtract from the time you see on the screen.

LOCAL TIME

You can use this feature of the *Language Teacher® ESC600T* to see the exact time of day, the day of the week, and the current date. This information is provided for the time zone represented by a city name selected on the *Setup* main menu.

 - Select  on the *Icons Menu* to open the *Local Time* section.
- ② Depending on the setting in the *Setup* main menu, you might hear the announcement of current time.

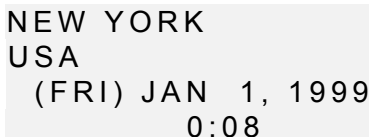

NEW YORK
USA
(FRI) JAN 1, 1999
0:08



Note: *New York, USA* defaults after a system initialization. To select another city, reset the date and time or adjust their display format, follow instructions in the *Setup* main menu section.


PC COMMUNICATION

With the aid of a *Language Teacher®* PC-Link cable (to be purchased separately) and the LT PC-Link software for Windows 95/98/NT (included with the package), you may transfer data from the organizer sections of your *Language Teacher® ESC600T* to a personal computer and back.



 
Note: The LT PC-Link for Windows 95/98/NT must be installed on your PC prior to using this function. Upon

installation consult the application's *Help* section for details.

- Connect your *Language Teacher® ESC600T* to a computer with a PC-Link cable.
- Select  on the *Icons Menu* to open the *PC Communication* section.



- Choose a transfer mode, for example, *Send data*.
- Select an organizer section for the data transfer. The following stand-by message will appear:

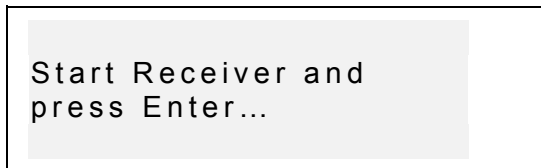

- Launch the PC-Link application on your PC and choose a transfer mode complementing the unit's mode (*Receive* in this example). Follow instructions on the screen.
- By pressing ENTER, start transmission first on the receiving, then on the sending end. Processing messages will appear in both applications.
- Amount of transmitted data will be announced.



Note: Always back up your important records!
Manufacturer assumes no responsibility for lost or corrupted data.

ADDITIONAL FEATURES

Volume Control

The volume control switch is located on the left-hand edge of the *Language Teacher® ESC600T*'s case.

External Power Jack

The *Language Teacher® ESC600T* is equipped with a jack for external power supply, located on the translator's right-hand edge. **Use of an inappropriate external power supply may cause failure of the unit and void the warranty.**

PC-Link Jack

The PC connection cable jack is located on the *Language Teacher® ESC600T*'s right-hand edge above the external power jack.



Note: To order a compatible AC/DC adapter or a PC-Link cable, contact your dealer or an Ectaco service center listed at the end of this book.